
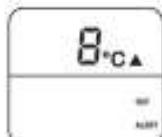


TRACEABLE® FOUR-ALARMER THERMOMETER °C/°F INSTRUCTIONS


OPERATING INSTRUCTIONS

Normal display shows inside and outside temp in 1/10 degree.

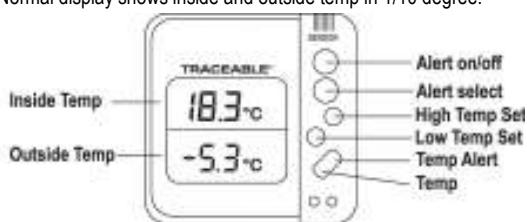


1. One point temp control
 - a. High Temp Alert "▲"
 - Slide switch to temp "Alert" position, press "Alert Select" to select High Temp Alert "▲" mode.
 - Press "Hi Set" to set desired High Temp Alert.
 - Press "Alert On/Off" to turn on the High Temp Alert. ("Alert" flag appears on display.)
 - Alarms and LED flashes 5 sec every one min when the sensed temp is higher than the set temp.
 - b. Low Temp Alert "▼"
 - Slide switch to temp "Alert" position, press "Alert Select" to select Low Temp Alert "▼" mode.
 - Press "Lo set" to set desired Low Temp Alert.
 - Press "Alert On/Off" to turn on the Low Temp Alert. (Alert flag appears on display.)
 - Alarms and LED flashes 5 sec every one min when the sensed temp is lower than the set temp.

FITTING THE OUTSIDE SENSOR: LOCATE OUTSIDE SENSOR AWAY FROM DIRECT SUNLIGHT AND HEAVY SATURATION.

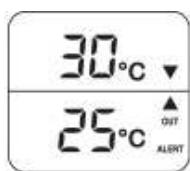

2. Two point temp control
 - a. Inside Temp Alert "☒"
 - Slide switch to temp "Alert" position, press "Alert Select" to select Inside Temp Alert "☒" mode.
 - Press "Hi set" to set the desired upper temp alert value.
 - Press "Lo set" to set the desired lower temp alert value.
 - Press "Alert on/off" to turn on the Inside Temp Alert. ("Alert" flag appears on display.)
 - Alarms and LED flashes 5 sec every one min when the sensed temp is within the set temp.
 - b. Outside Temp Alert "❖"
 - Slide switch to temp "Alert" position, press "Alert select" to select Outside Temp Alert "❖" mode.
 - Press "Hi set" to set the desired upper temp alert value.
 - Press "Lo set" to set the desired lower temp alert value.
 - Press "Alert on/off" to turn on the Outside Temp Alert. ("Alert" flag appears on display)
 - Alarms and LED flashes 5 sec every one min when the sensed temp is outside the set temp.

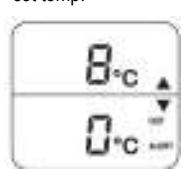


- Press "Alert on/off" to turn on the Outside Temp Alert. ("Alert" flag appears on display)
- Alarms and LED flashes 5 sec every one min when the sensed temp is outside the set temp.

3. Slide switch to "Temp" position after setting temp alert.

4. Alert off


Press "Alert on/off" in temp "Alert" position, "Alert" flag disappears on display.

BATTERY REPLACEMENT:

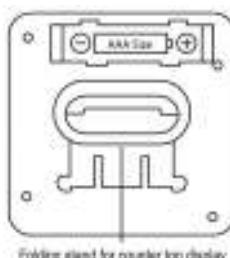

- 1 Pc "AAA" or "UM4" battery
- Insert the battery as direction indicated.

Use fingernail to lift up battery cover and insert battery as to indicated direction.

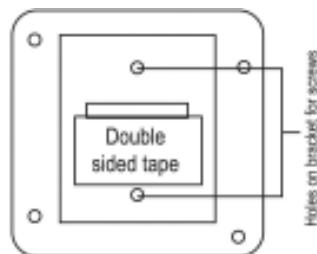

EASY MOUNTING OF BRACKET ON WALL BY:

- Double-sided tape or
- Screws

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

CONTROL COMPANY

4455 Rex Road
 Friendswood, Texas 77546 USA
 Ph. 281-482-1714 Fax 281-482-9448
 E-mail sales@control3.com
www.control3.com

Control Company is ISO 9001 Quality-Certified by DNV and ISO 17025 accredited as a Calibration Laboratory by A2LA.